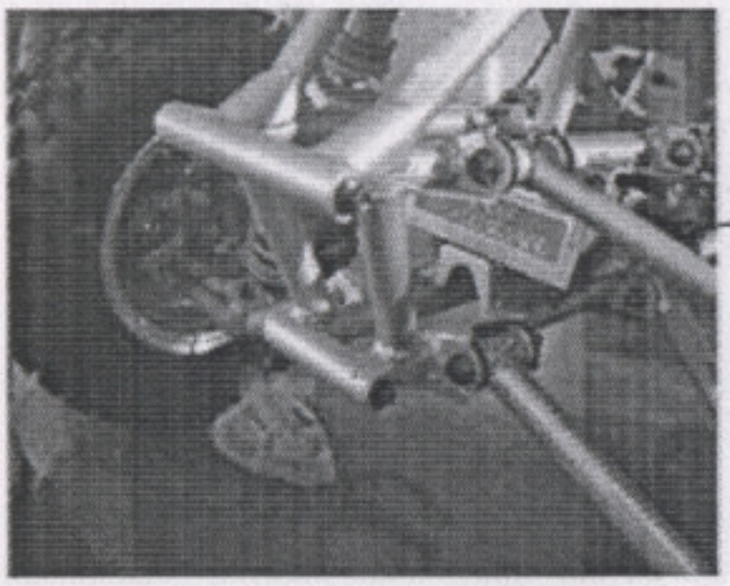

S/N	NAME	QTY	MODEL	REMARK
①	FRAME	1		ON THE ATV
②	FRONT HUMPER	1		ON THE ATV
③	BOLT	4	M8×20	ON THE ATV

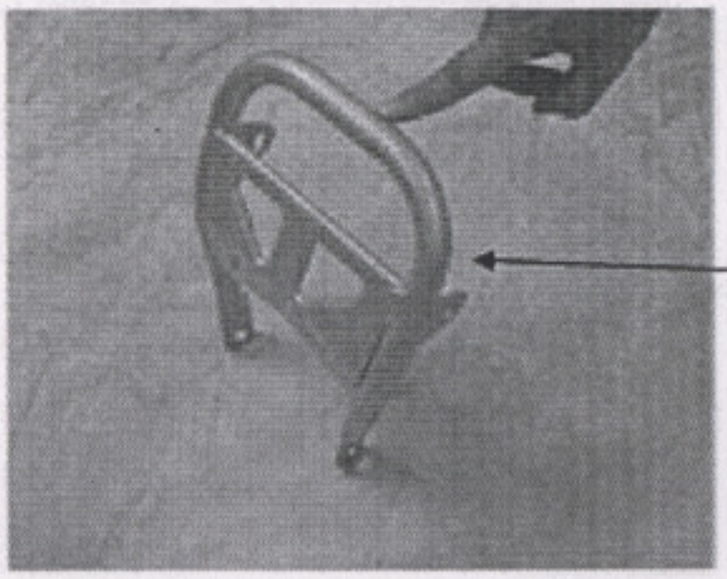

STEPS:

1、GET OUT OF ③ FROM ①;
2、FIX ② ON ① BY ③.

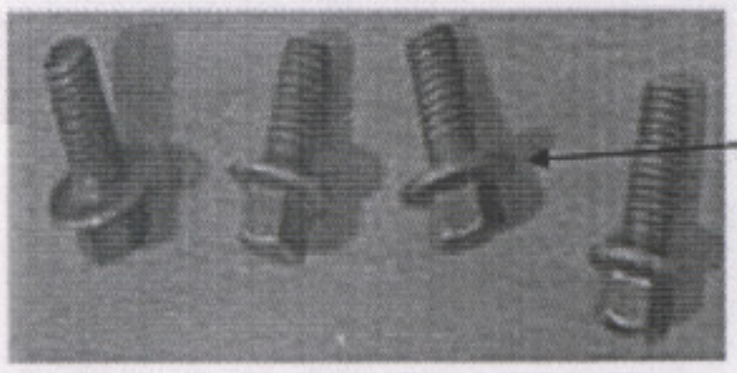

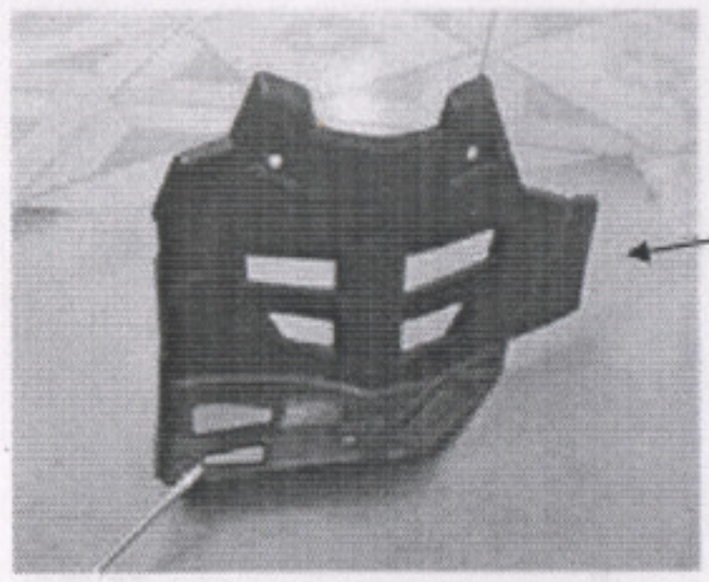

STEP THREE: INSTALLATION INSTRUCTION OF FOOTREST BOARD

SN	name	QTY	model	remark
①	FOOTREST BOARD	1		ON THE ATV
②	NUT	4	M6×16	ON ③
③	)TREST BOARD BRAC	1		ON THE ATV

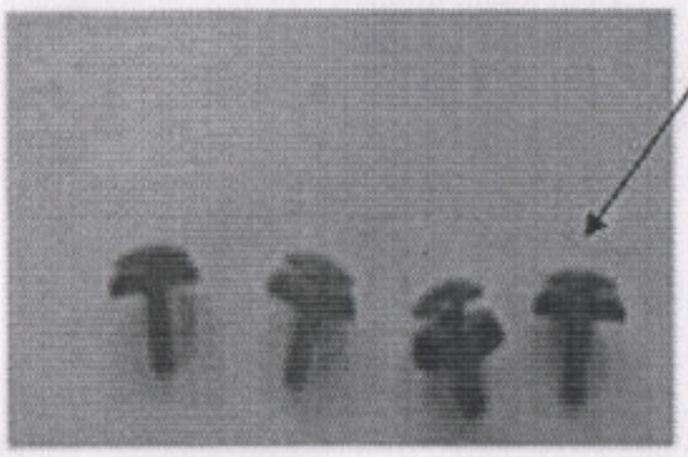

STEPS:

1、GET OUT OF ② FROM ③;
2、FIX ① ON ③ BY ②.
TOOL: SCREWDRIVER OF CLUB STYLE.

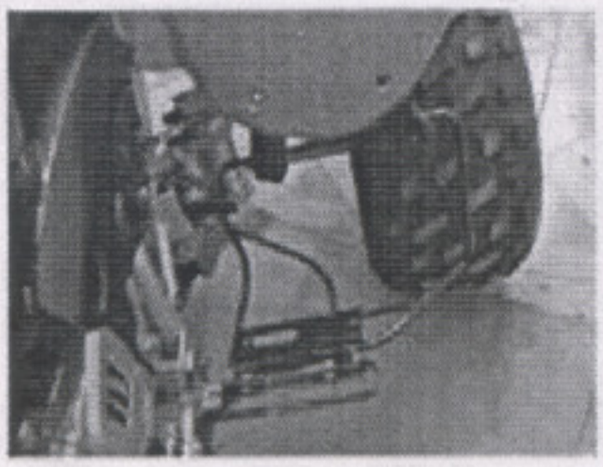

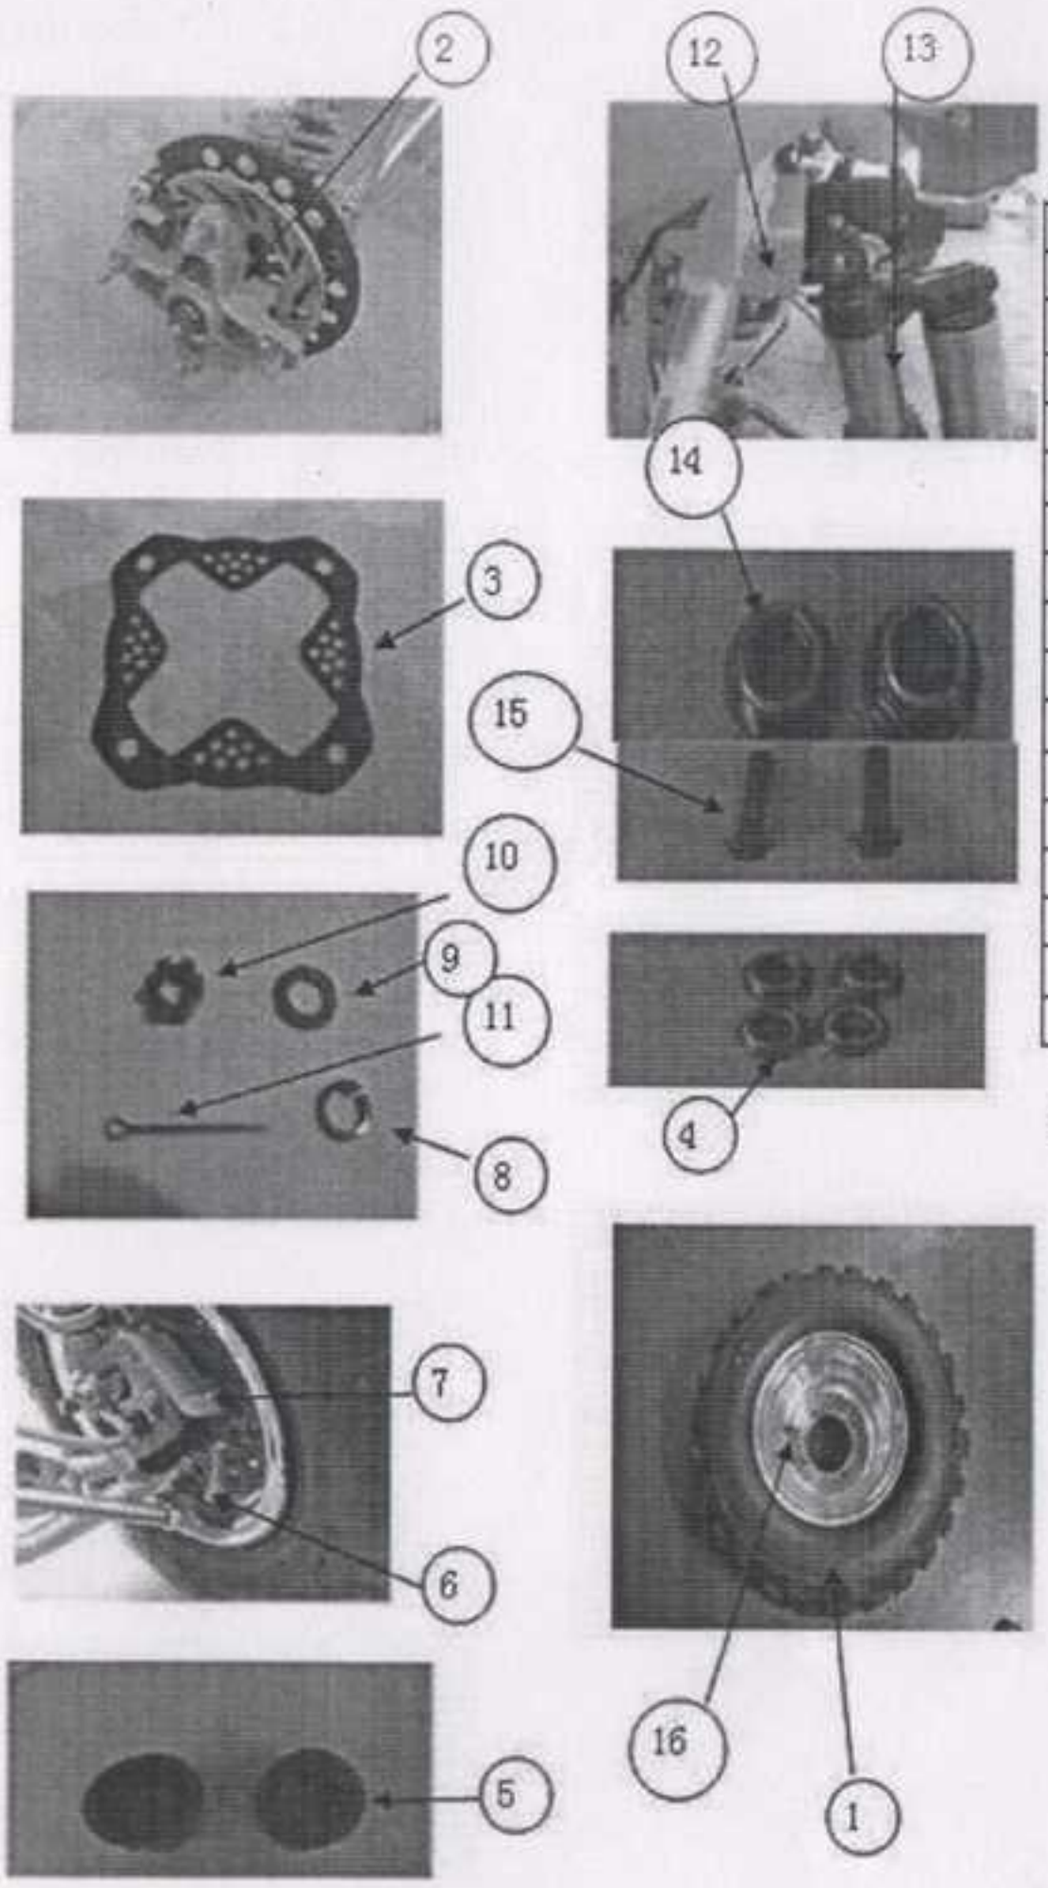

STEP FOUR: INSTALLATION INSTRUCTION OF FOR FRONT WHEELS

S/N	NAME	QTY	MODEL	REMARK
①	FRONT WHEEL	1		ON THE ATV
②	NECTING PLATE OF FRONT WH	1		ON THE ATV
③	OTECTER OF FRONT BRAKE DI	2		IN THE ACCESSORIES BOX
④	NUT	8	M10	IN THE ACCESSORIES BOX
⑤	DUST-PROOF-COVER	2		IN THE ACCESSORIES BOX
⑥	TIE ROD ASSY	1		ON THE ATV
⑦	STEERING PARTS	1		ON THE ATV
⑧	SPRING MAT	1	Φ10	IN THE ACCESSORIES BOX
⑨	PLATE MAT	1	Φ10	IN THE ACCESSORIES BOX
⑩	NUT	1	M10	IN THE ACCESSORIES BOX
⑪	COTTER PIN	MALL MODE	2	IN THE ACCESSORIES BOX
⑫	ING PLATE OF F SHOCKER A	1		ON THE ATV
⑬	FRONT SHOCKER ABSORBER	1		ON THE ATV
⑭	BOLT	1	M10×45	IN THE ACCESSORIES BOX
⑮	NUT	1	M10	IN THE ACCESSORIES BOX
⑯	VALVE	1		ON①

STEPS:

1、FIX⑥ON⑦, THEN USE ⑧、⑨、⑩ TO FIX IT、AND INSERT ⑪ INTO⑥;
2、FIX③ON②, FIX ① ON ② BY④。
3、FIX ⑬ ON ⑫ BY ⑭ ⑮
4、FIX⑤ON②

TOOLS: SCREWDRIVER OF CLUB STYLE。

ATTENTION: THE STEP OF RIGHT AND LEFT ASSEMBLING IS THE SAME, ⑯ TO OUTSIDE。

TOOL: 14# CROSS-POINT SCREWDRIVER AND WRENCI

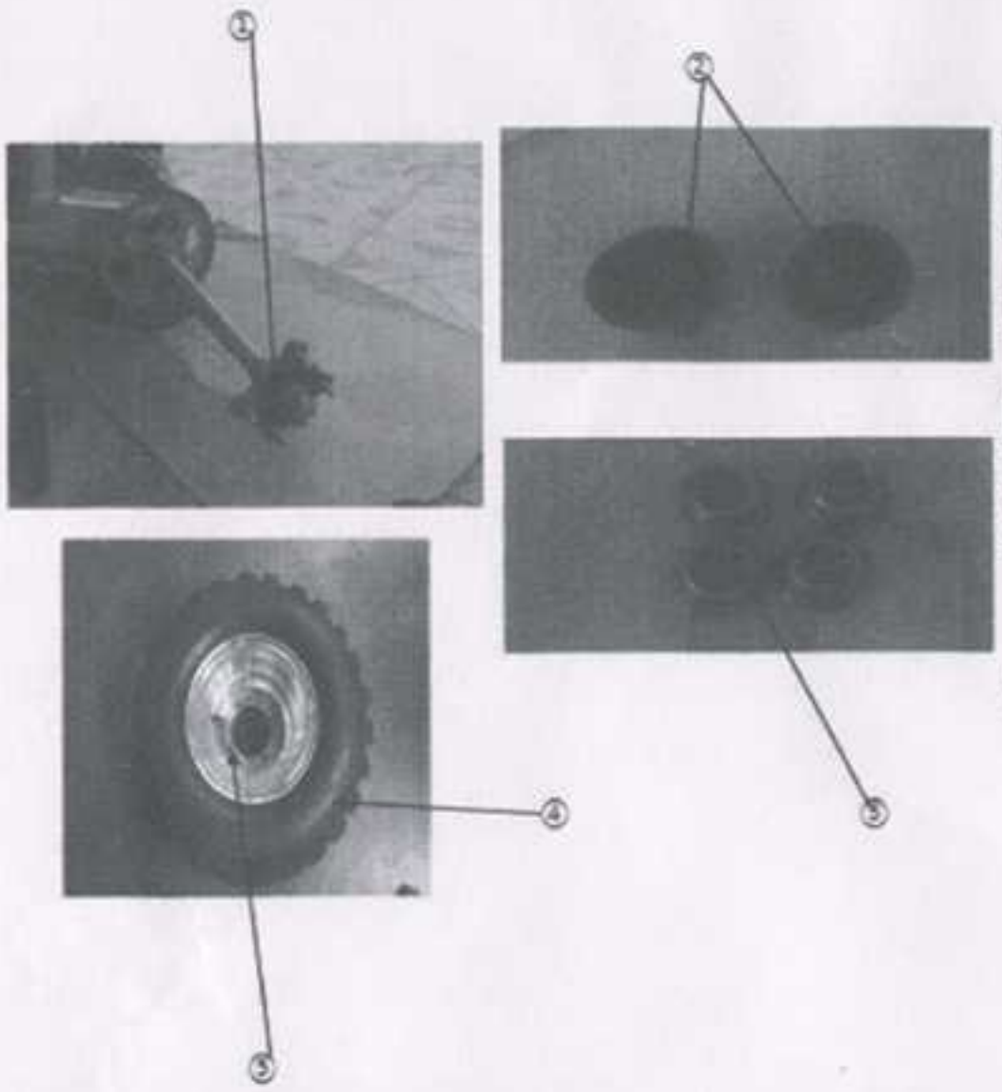

STEP FIVE:INSTALLATION INSTRUCTION OF FOR REAR WHEELS

S/N	NAME	QTY	MODEL	REMARK
①	CONNECTING PLATE OF REAR WHEEL	1		ON THE ATV
②	DUST-PROOF-COVER	2		IN THE ACCESSORIES BOX
③	NUT	4	M10	IN THE ACCESSORIES BOX
④	REAR WHEEL	1		ON THE ATV
⑤	VALVE	1		ON④

STEP;

1、FIX④ ON① BY③;
2、BUTTON ②ON①。

ATTENTION : THE STEP OF RIGHT AND LEFT ASSEMBLING IS THE SAME , ⑤TO OUTSIDE.

TOOL:14# CROSS-POINT SCREWDRIVER AND WRENCH(M14)

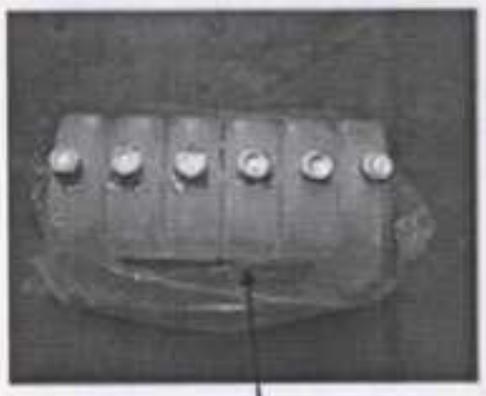

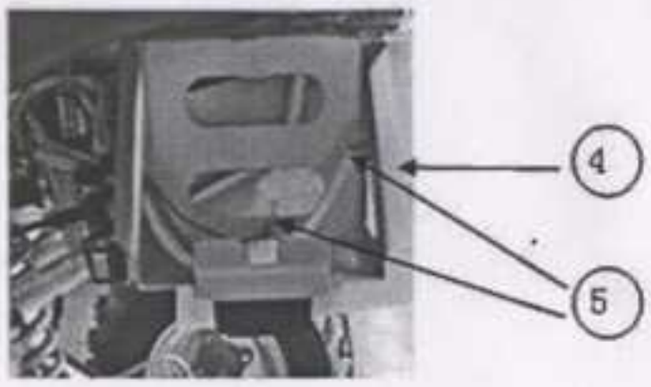

STEP SIX: INSTALLATION INSTRUCTION OF BATTERY

S/N	NAME	QTY	MODEL	REMARK
①	BATTERY ELECTROLYTE	1		IN THE ACCESSORIES BOX
②	BATTERY ASSY ,	1	12N9-BS	IN THE ACCESSORIES BOX
③	RUBBER PLUG	1		IN THE ACCESSORIES BOX
④	BATTERY BOX	1		ON THE ATV
⑤	BATTERY CABLE	2		ON THE ATV
⑥	PRESSURE BLOCK OF BATTERY	1		IN THE ACCESSORIES BOX

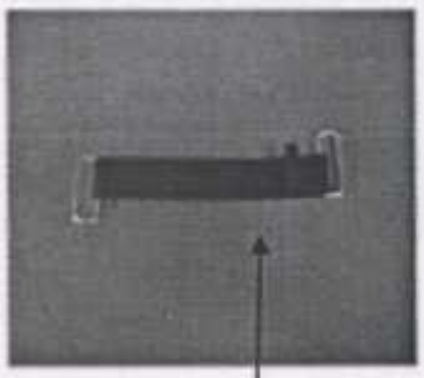

STEPS:

1 PUT ① INTO ② ACCORDING TO BATTERY ELECTROLYTE INSTRUTION AND CLOSE IT BY ③.

2 PUT ② INTO THE RIGHT PLACE OF ④.

3 CONNECTING ⑤ WITH ②

4 FIX ② ON ④ BY ⑤ .
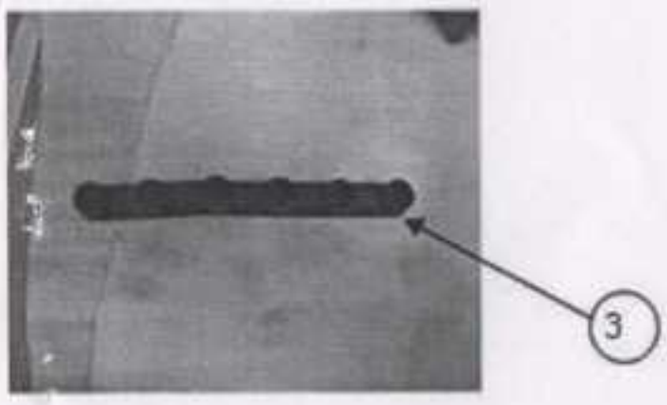
ATTENTION: BATTERY HAS ANODE AND CATHODE , BATTERY CABLE HAS RED CABLE AND GREEN CALBE. THE RED CABLE SHOULD